

installation instructions:

# WOOD WALL TILES

## SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.

Wear proper protective gear.

Follow power tool and adhesive instructions, and users manuals.

Use common sense and follow good construction practices.

### TOOL & MATERIAL CHECKLIST

- Polyurethane glue (3 tubes per 100 sq. ft.)
- Saw (miter saw, a jigsaw, a table saw)
- Pneumatic Nail Gun/Nails
- Power drill or hammer
- Fine sandpaper
- Level (laser recommended) and tape measure
- Ladder


### SPECIAL INSTRUCTIONS AND NOTES

- Before installing, acclimate wood tiles for at least 72 hours in the room where you will be installing them.
- Depending on your installation method, you will have to choose the correct adhesive, but we recommend quality polyurethane glue and small nails.
- In most applications you will have to trim some tiles. Cut them with a standard power tool, such as a table saw. Sand cut edge to remove debris.
- Before installing on the wall, place the tiles side-by-side on the floor and arrange them to balance out the color and grain pattern.

### STEP BY STEP INSTRUCTIONS

1. Smooth installation surface with sandpaper by removing excessive bumps or texture. Wipe wall clean to clear debris.
2. Remove the existing trim and electrical outlet covers from the wall area that you will be working on and wipe the wall with a clean cloth to remove any dust.
3. Measure the height of the wall for proper fitting as wall tiles may need to be cut to ensure proper fit. The first and last panel in each row will need to be trimmed to create a finished, even edge. Use a laser level to create a reference line to make sure the first row is level.
4. Always start by installing the first panel at the bottom left corner of the wall working to the right.
5. Apply adhesive to the back of the tile and press against the wall. You can choose to secure with nails by nailing through wood tile into studs in the wall. (Follow adhesive manufacturer's instructions for proper application) Interlocking end joints allow for seamless installation.

### EXAMPLE INSTALLATION DIAGRAMS

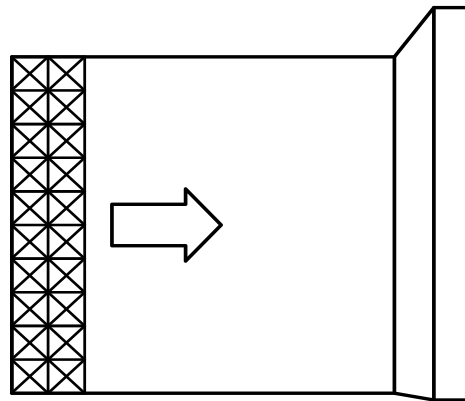

Start first panel at the bottom left corner of the wall working to the right.



Polyurethane glue on back of tile

[www.ekenamillwork.com](http://www.ekenamillwork.com)  
We Can Help. Call (866) 607-0453

**EKENA**  
MILLWORK

Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork